


General:

(A) Install over solid sheathing with housewrap underlay. You may install furring strips over that for uneven surfaces, or to allow insulation between furring strips, but that does not alleviate the need for sheathing/housewrap.

(B) Fasten panels with pancake or hex head screw 2' on center.

PANELS

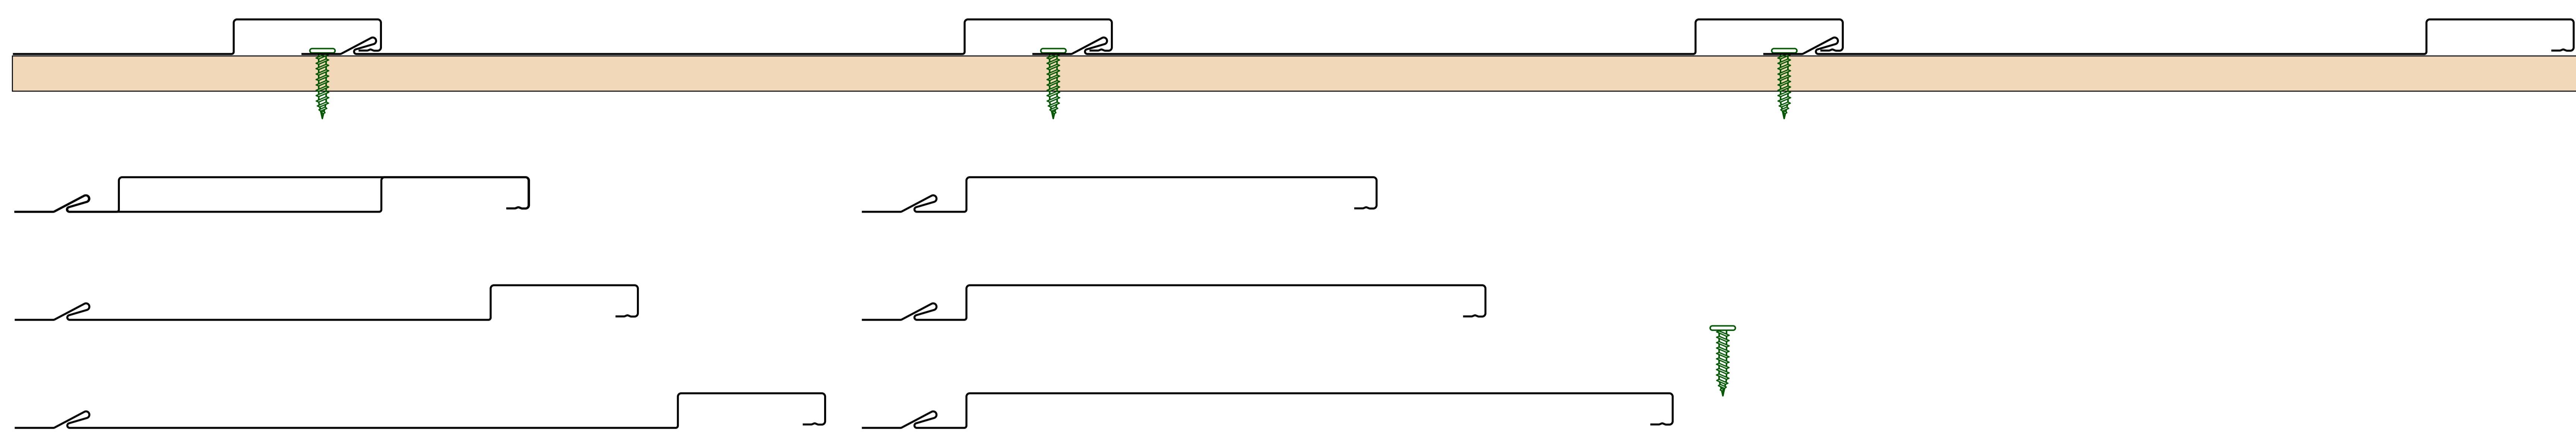


Board & Batten Siding Panel

Vertical Plank Siding Panel

Pancake Screw


OUTSIDE CORNER

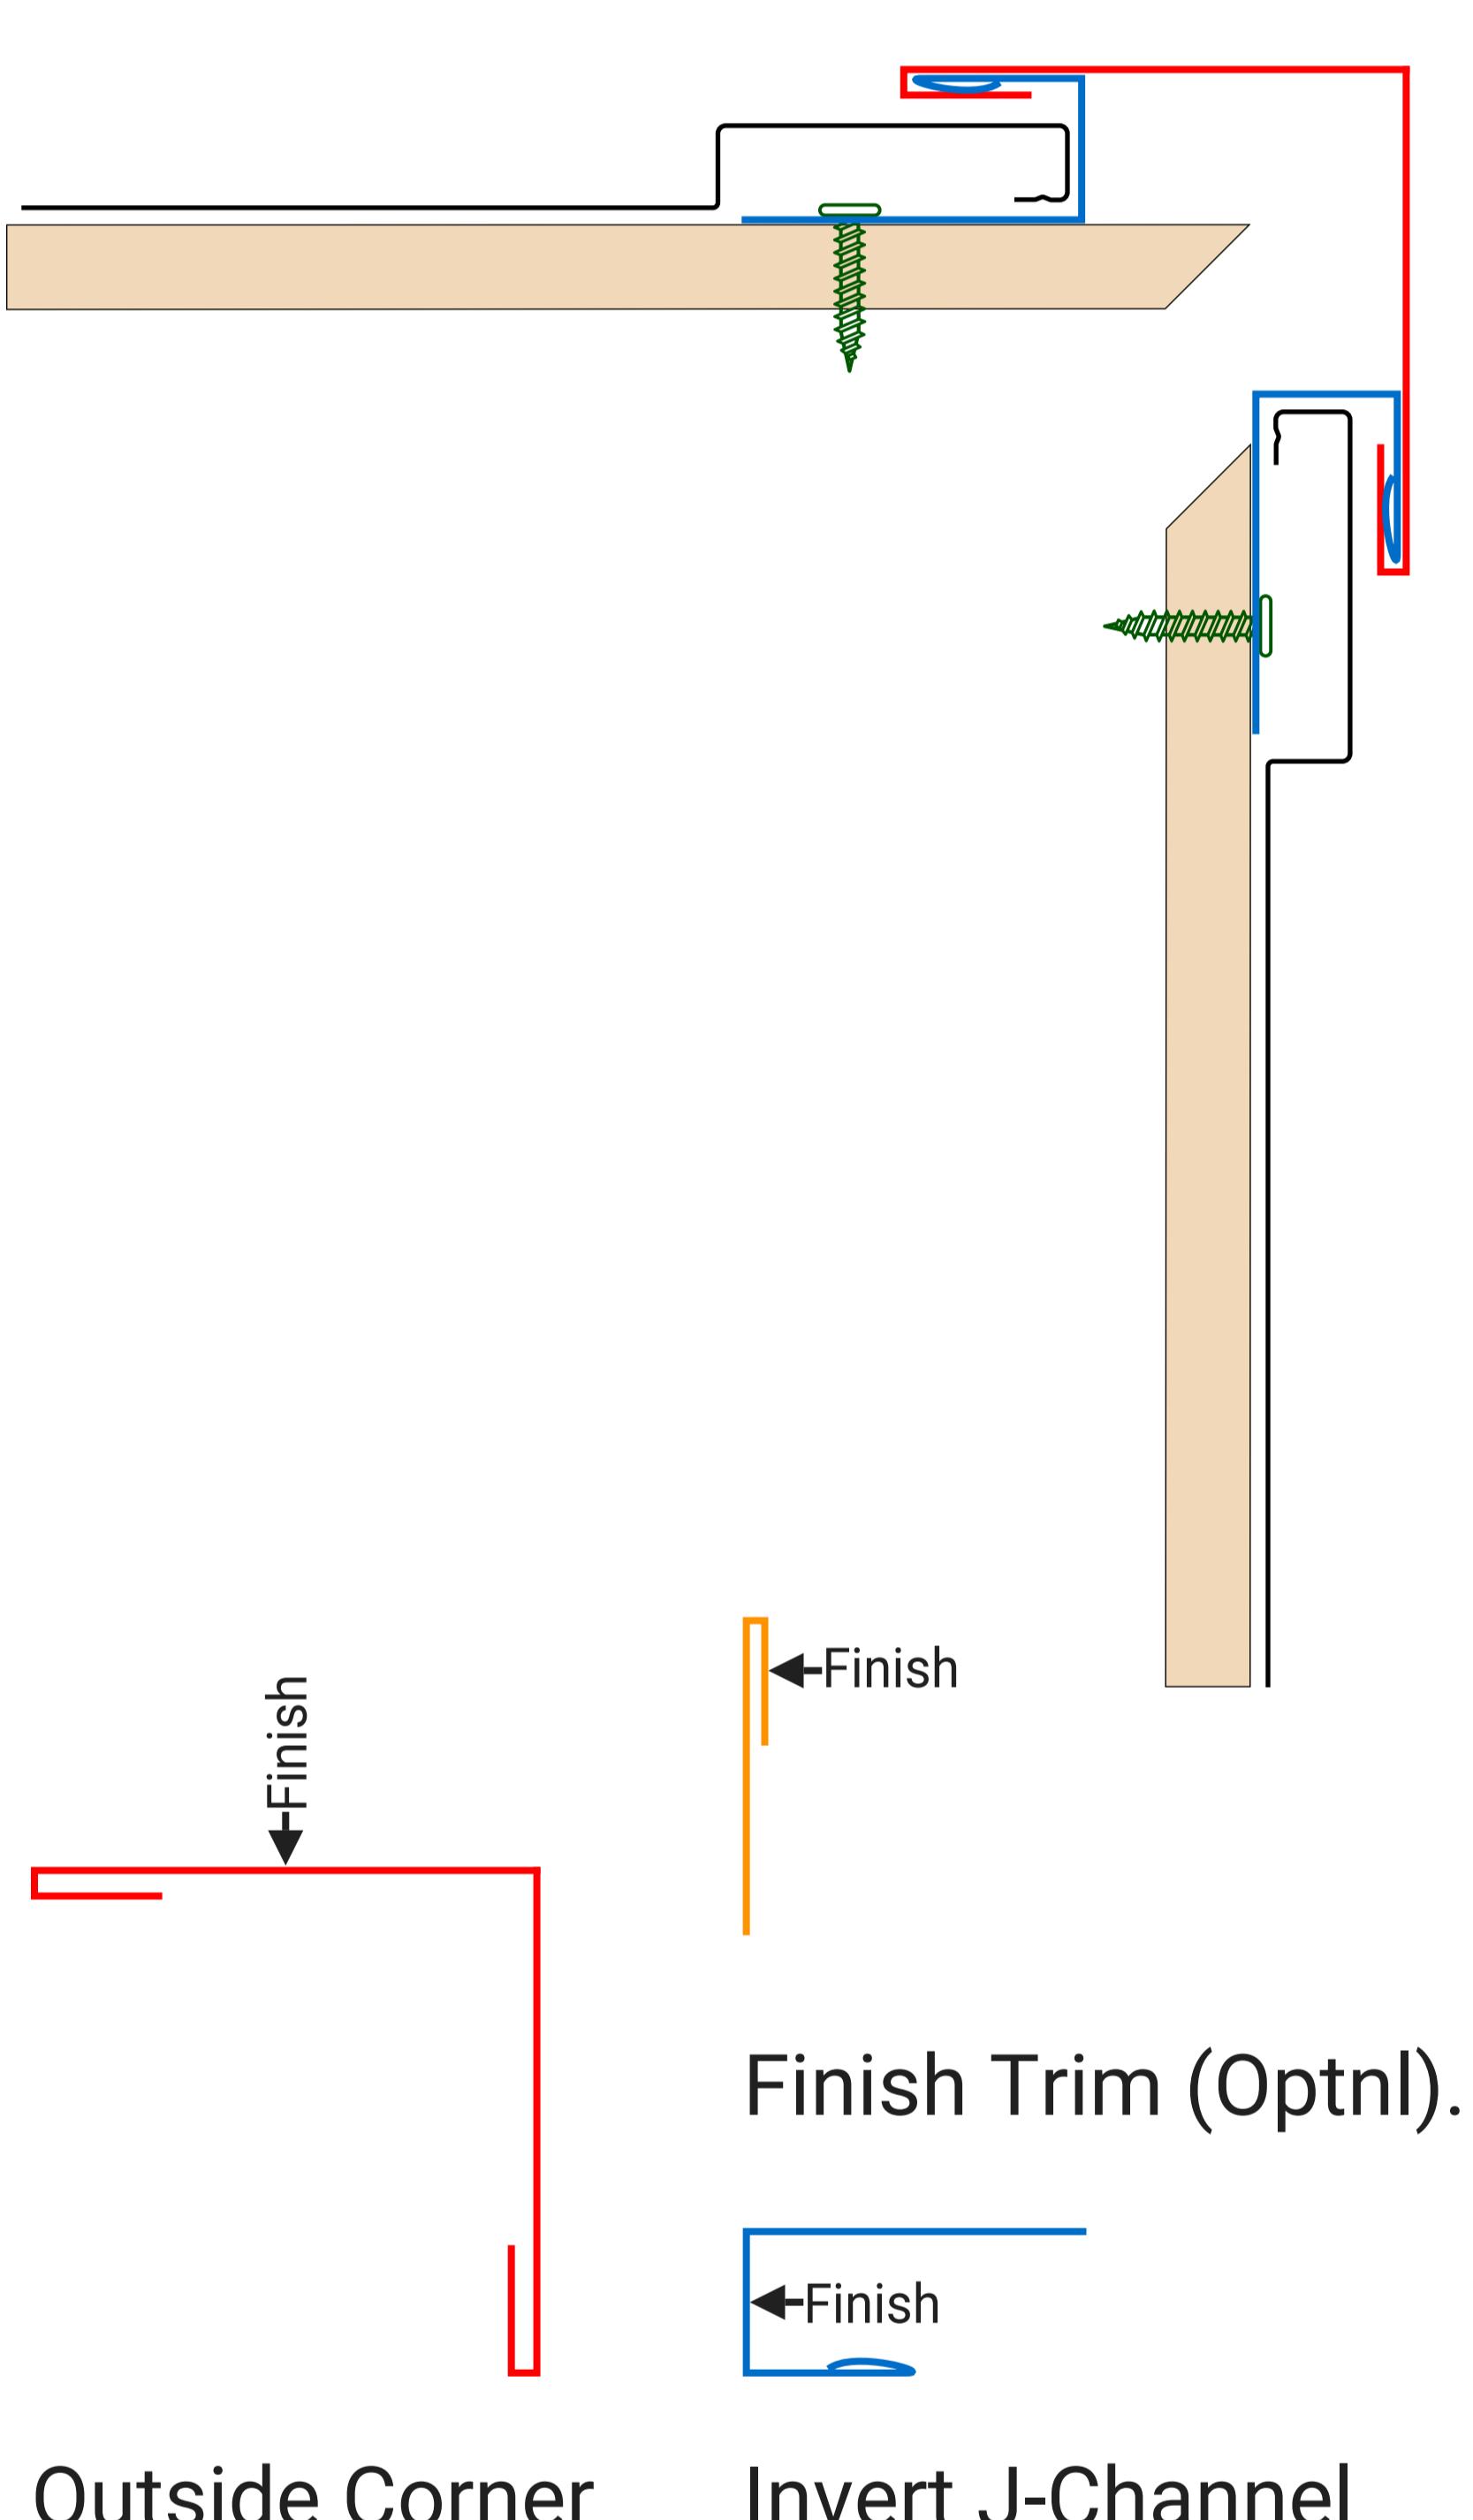

Outside Corner


Invert J-Channel

TOP OF WALL

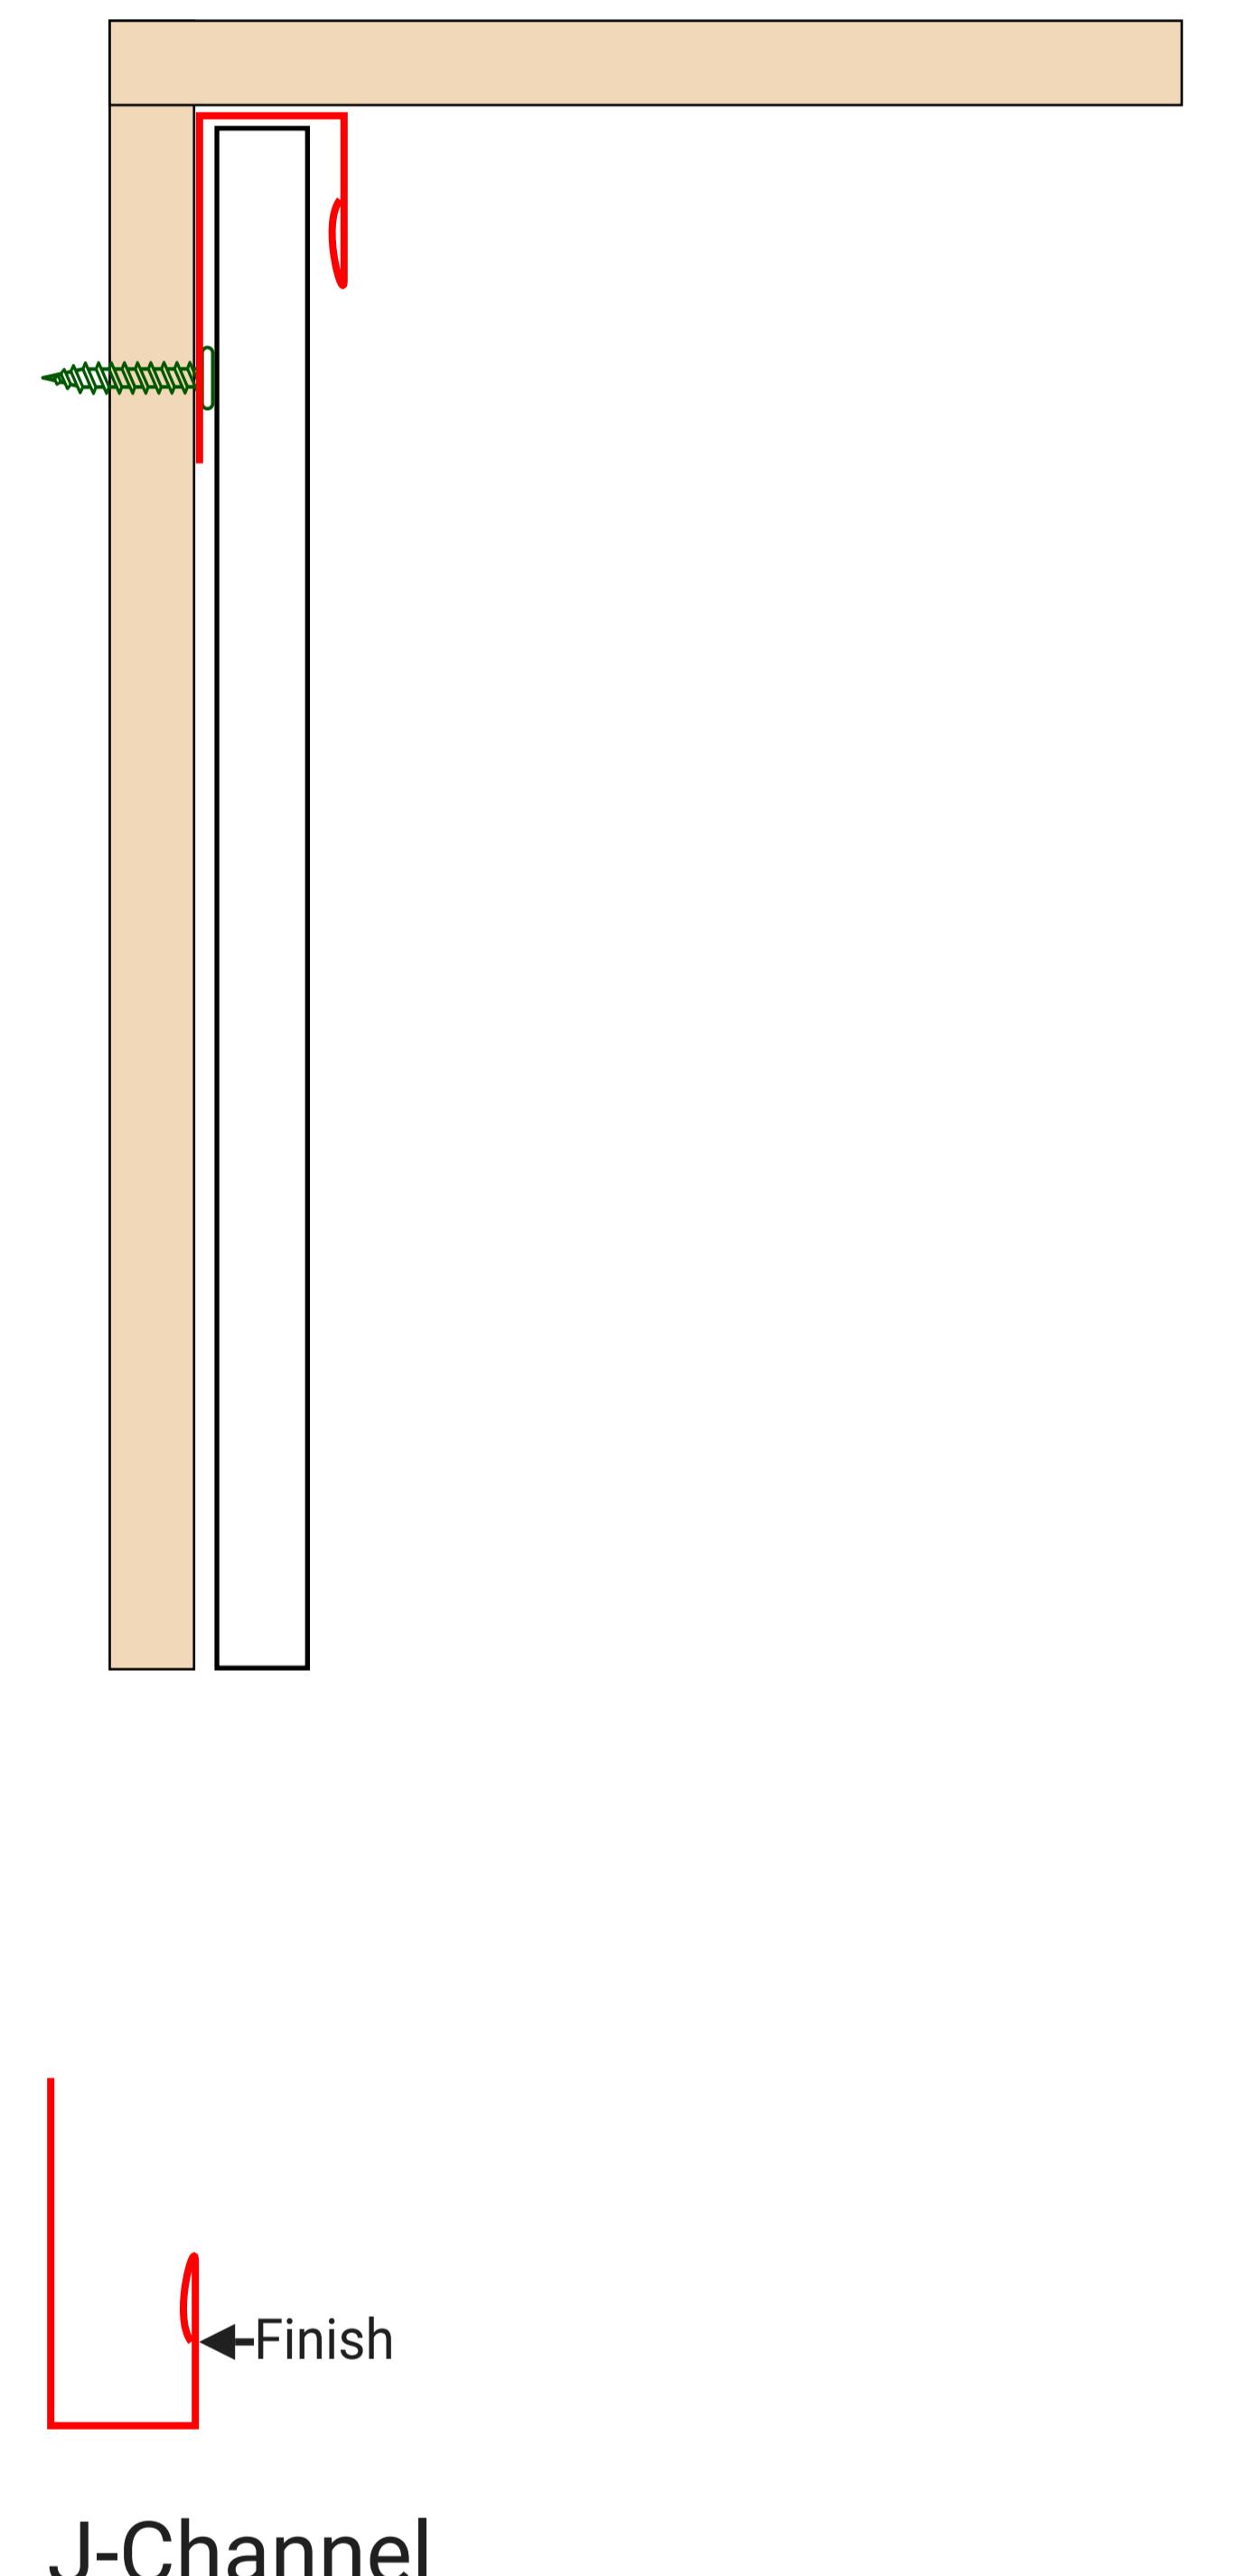

J-Channel


BOTTOM OF WALL - Drip Cap

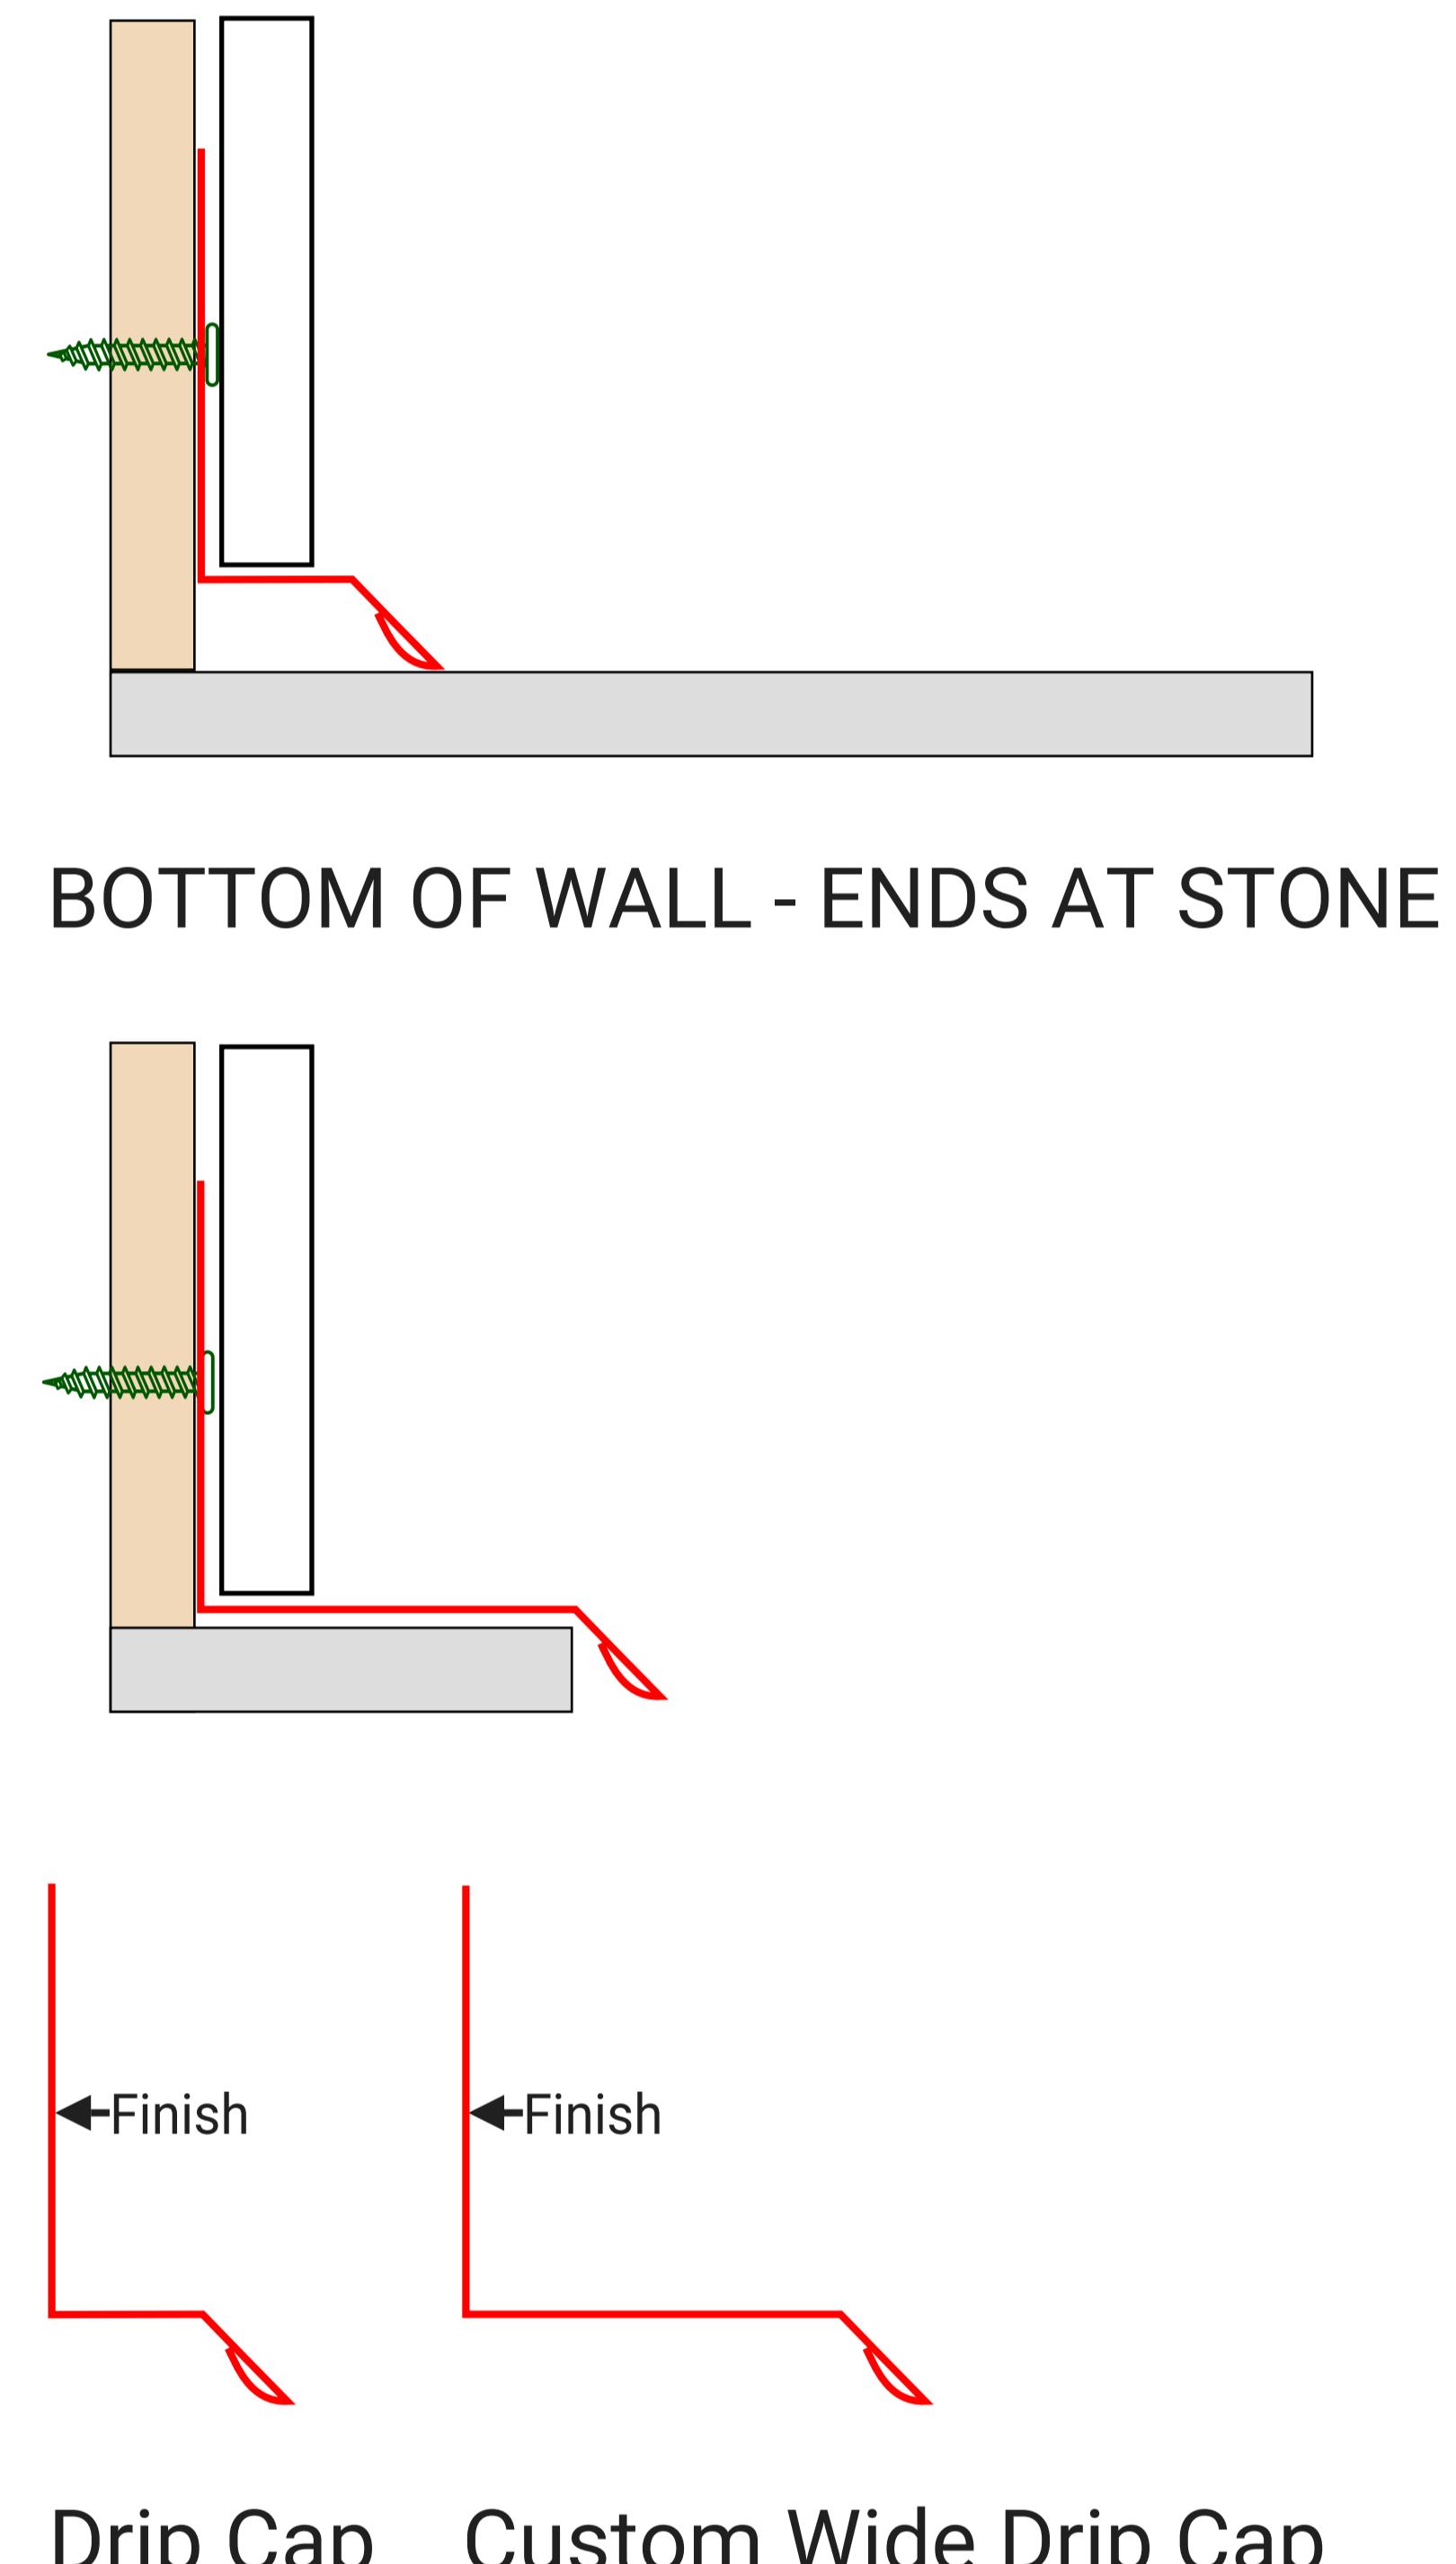

Drip Cap


Custom Wide Drip Cap

BOTTOM OF WALL - Drip Cap

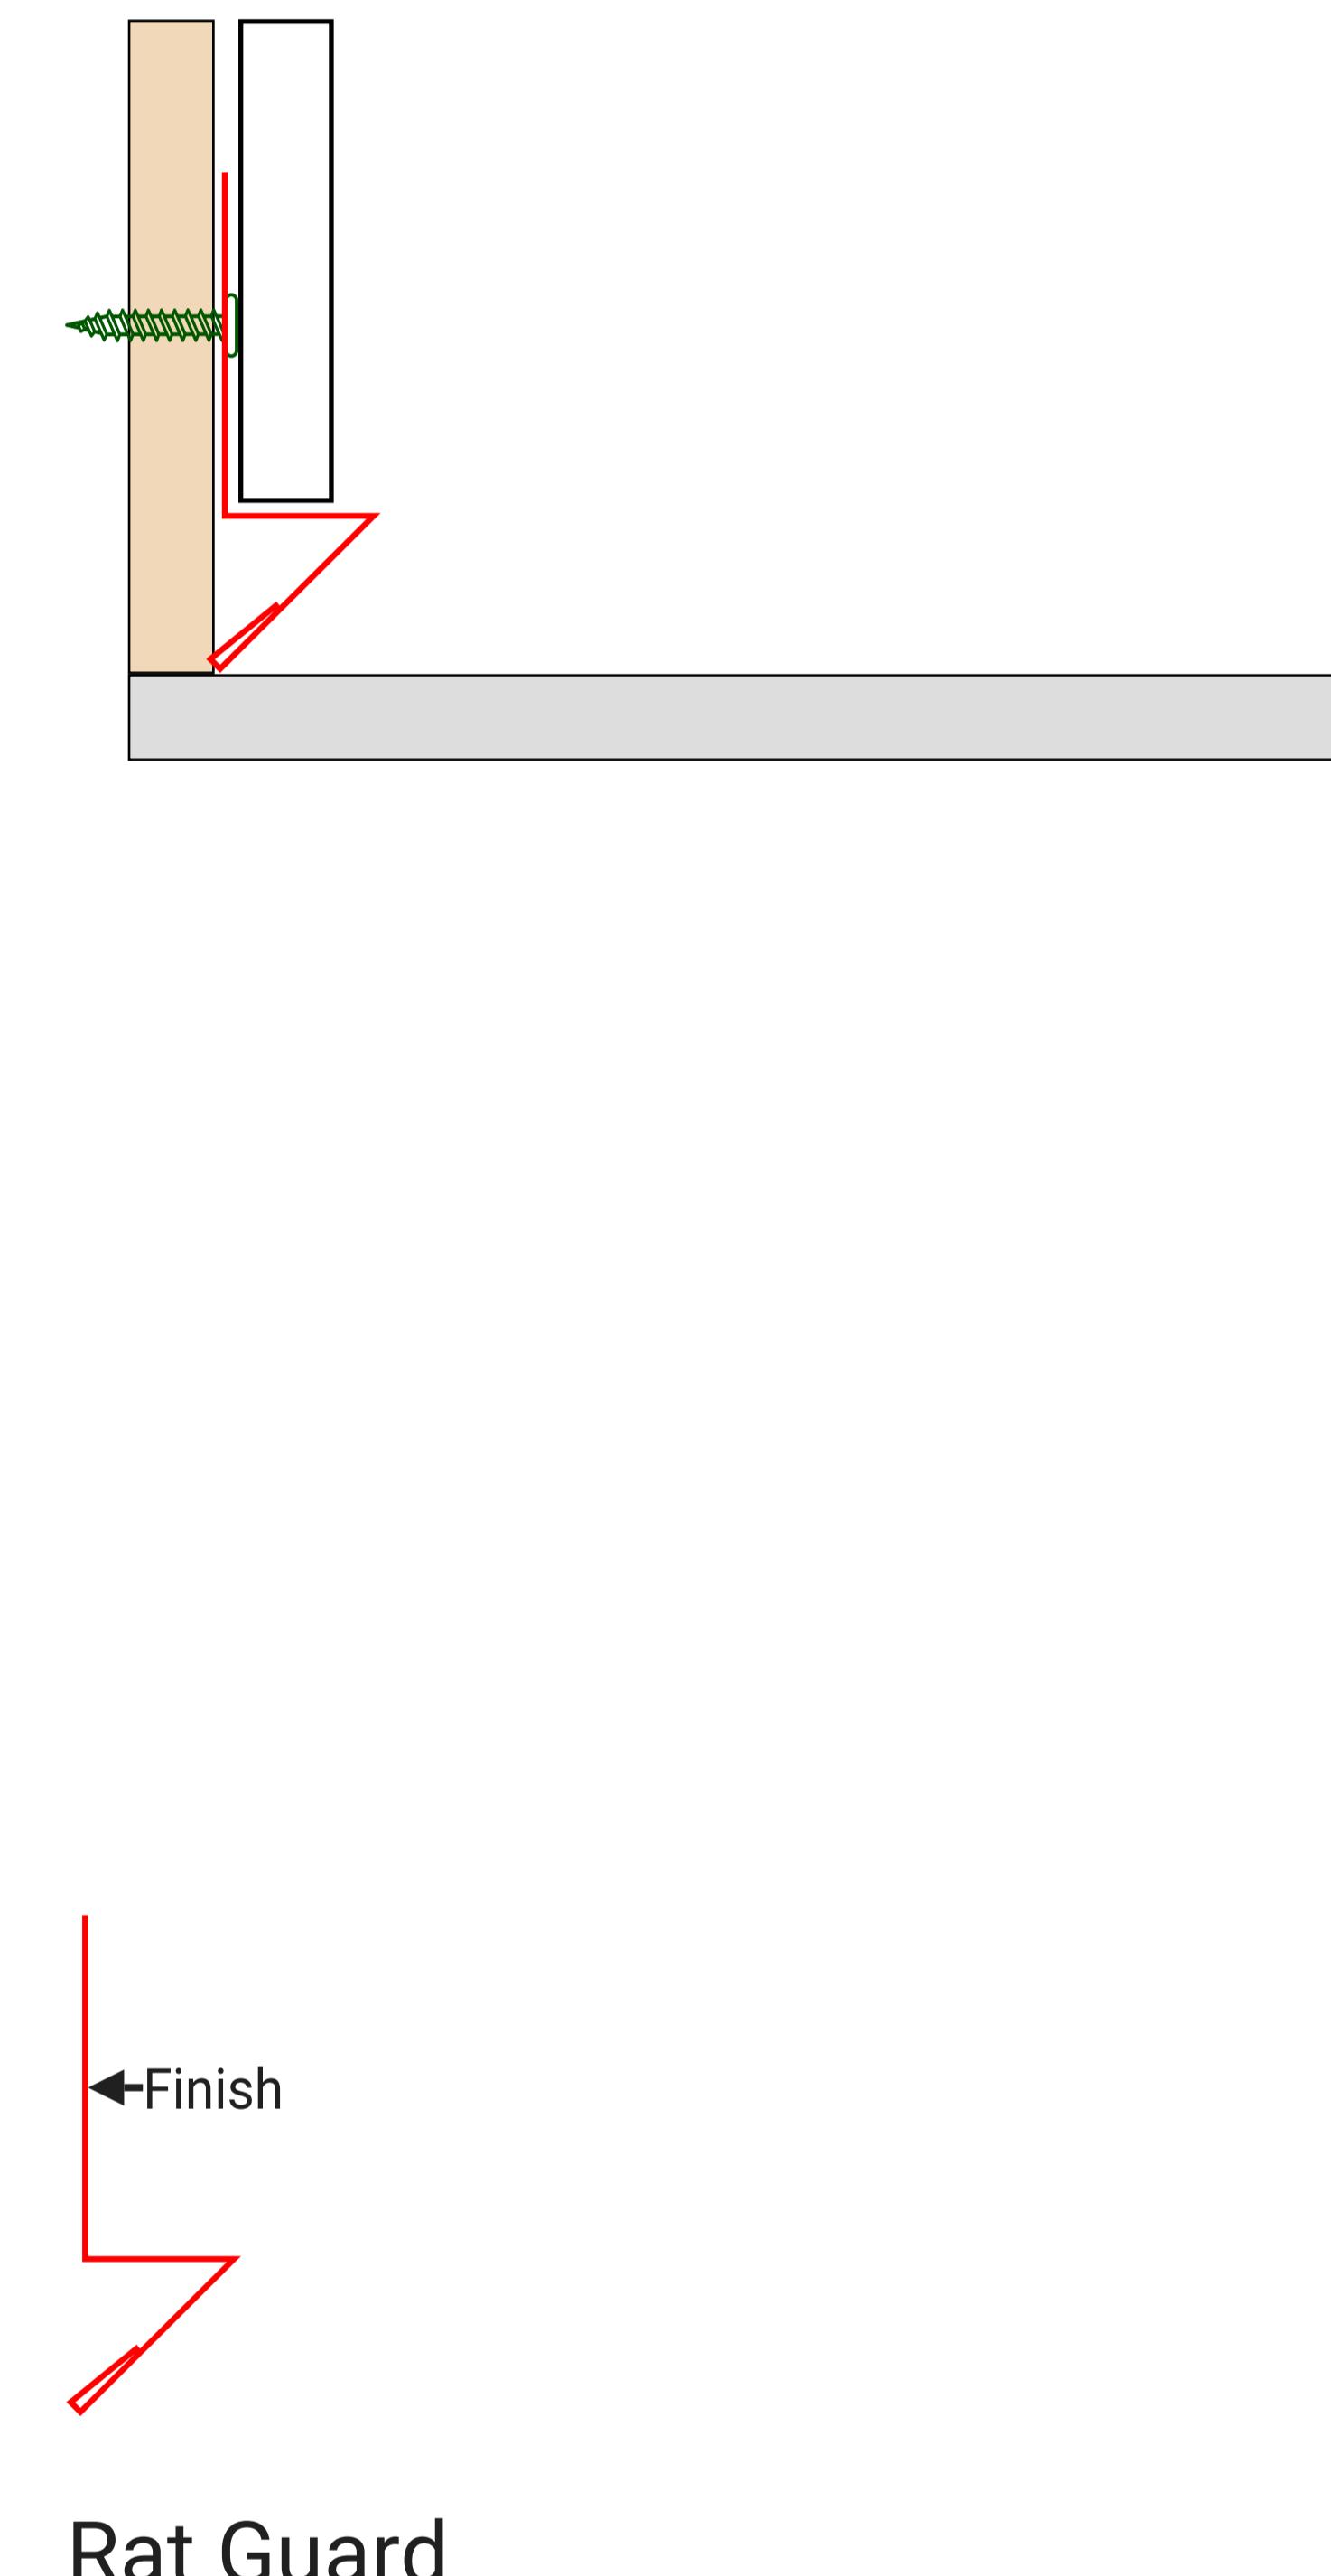

Rat Guard


INSIDE CORNER

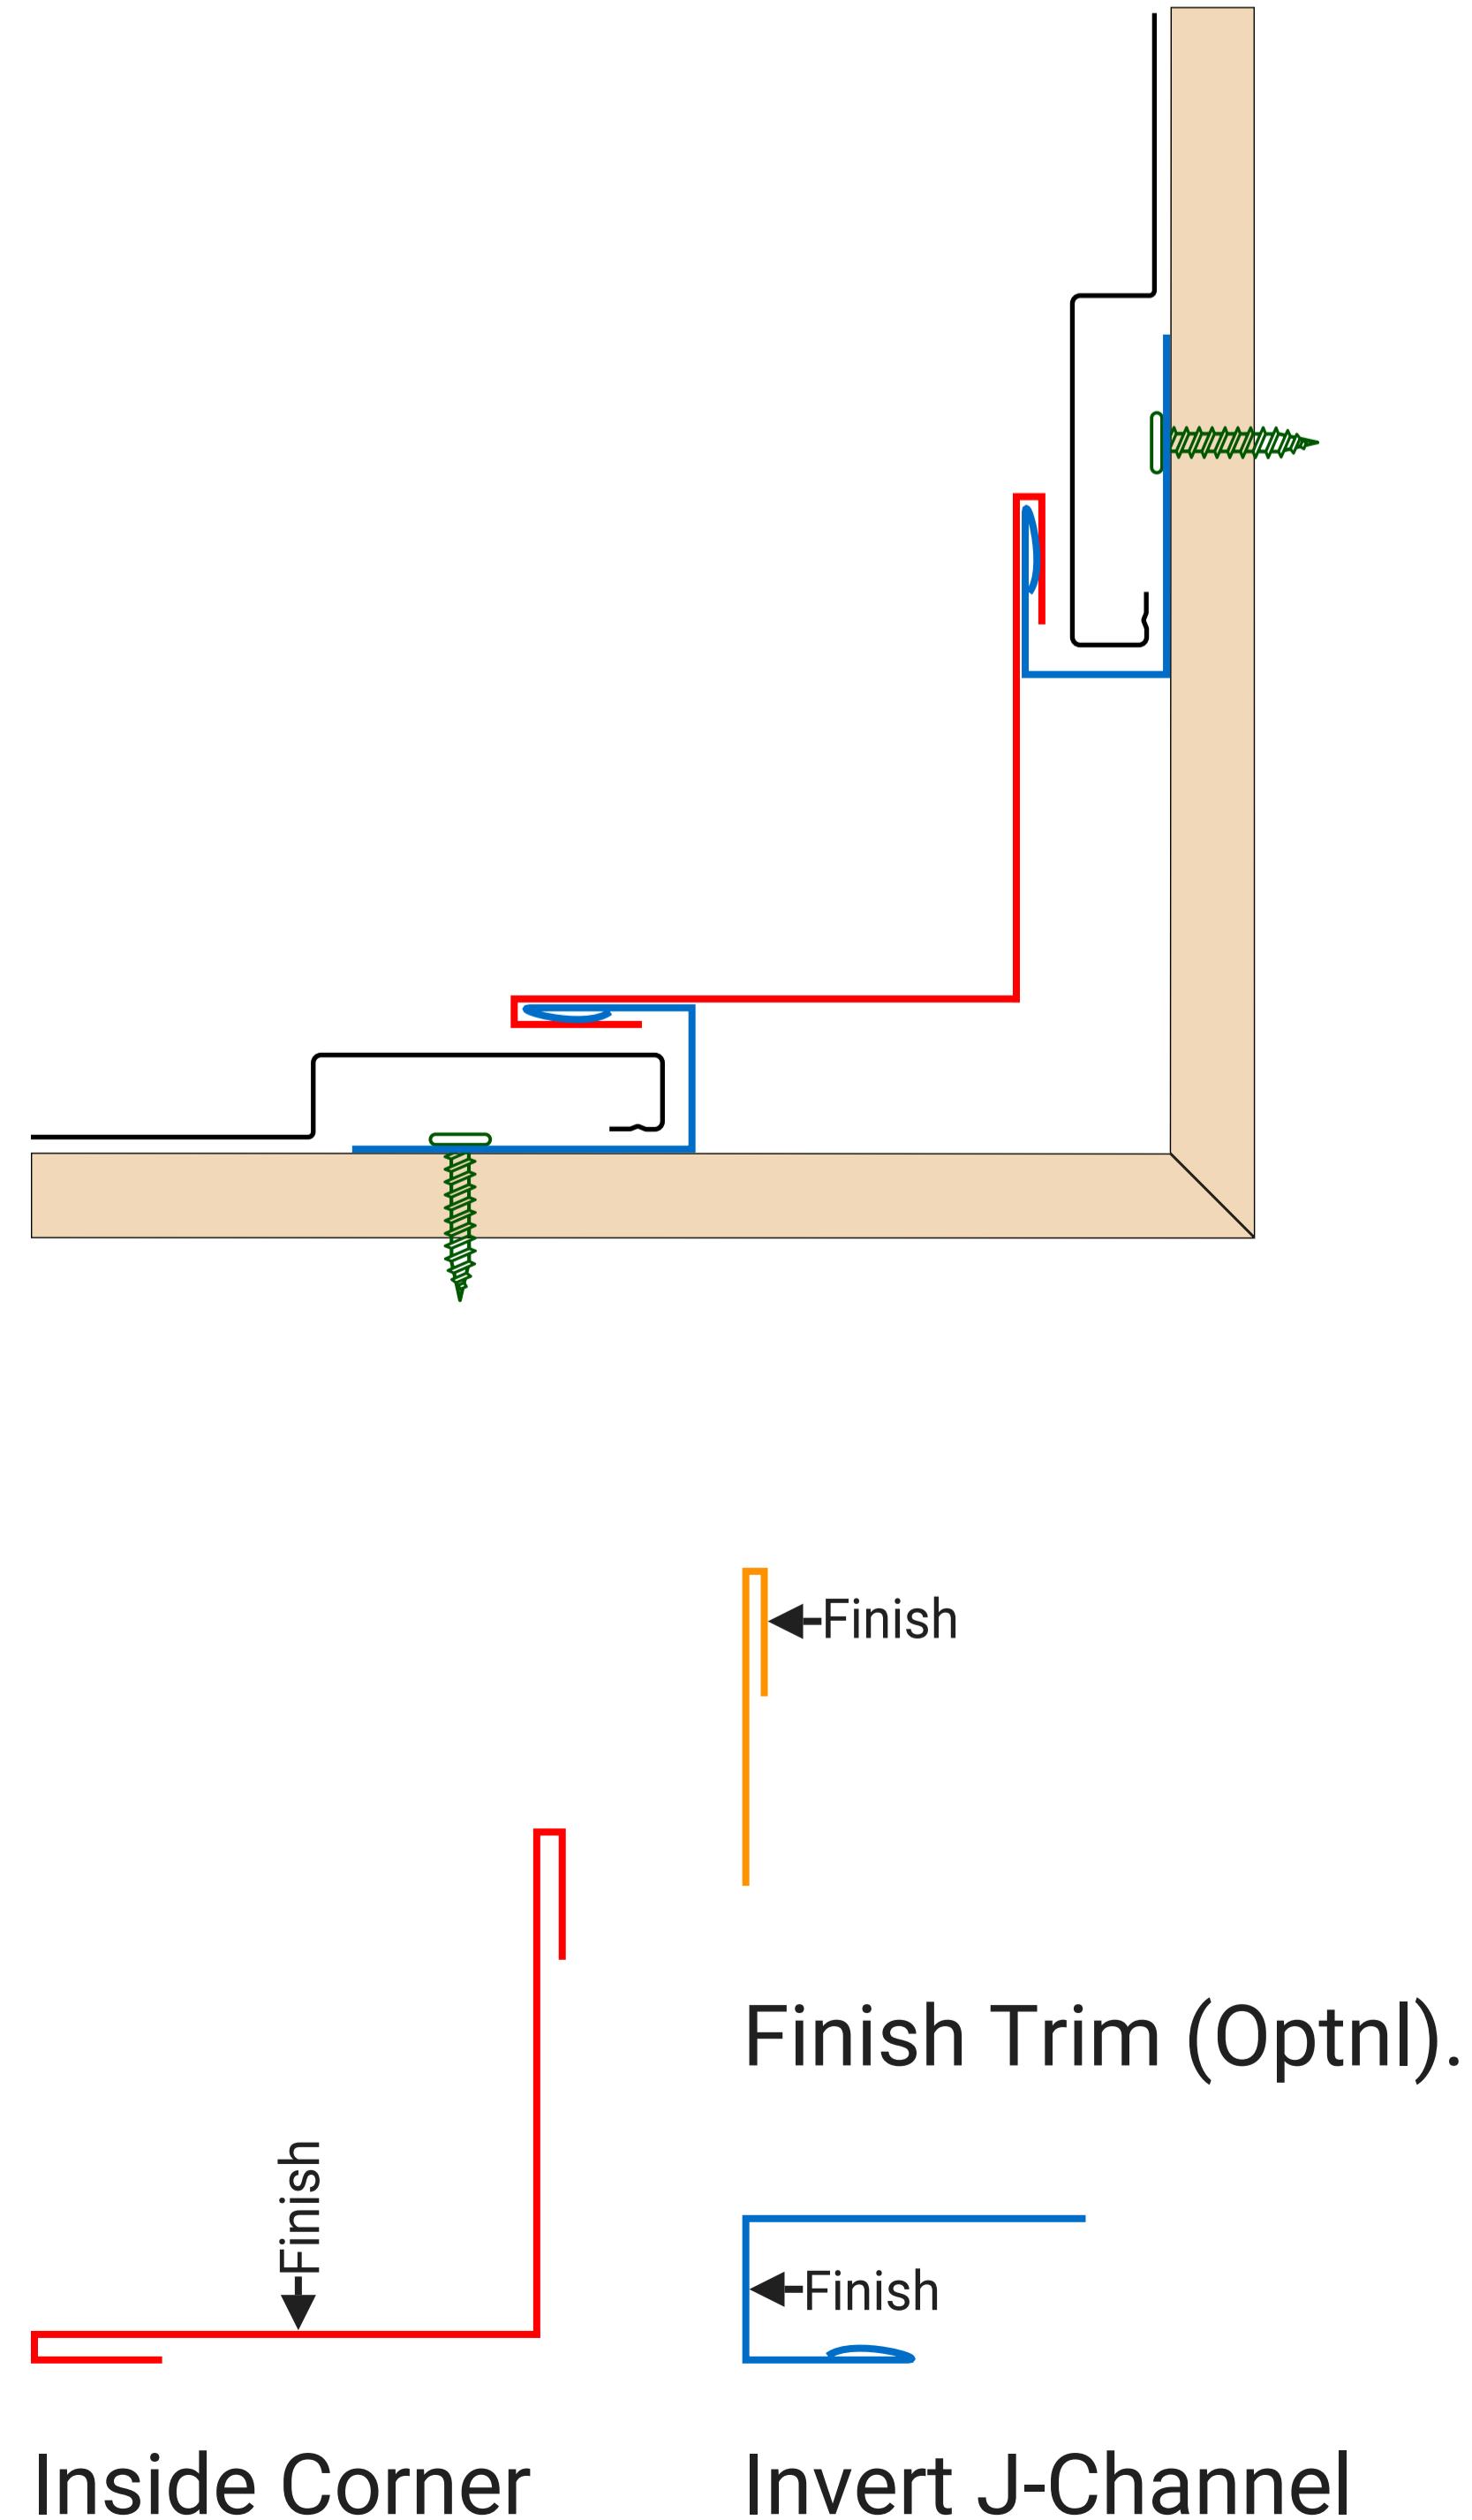


Inside Corner

Invert J-Channel

WAISCOAT TRANSITION

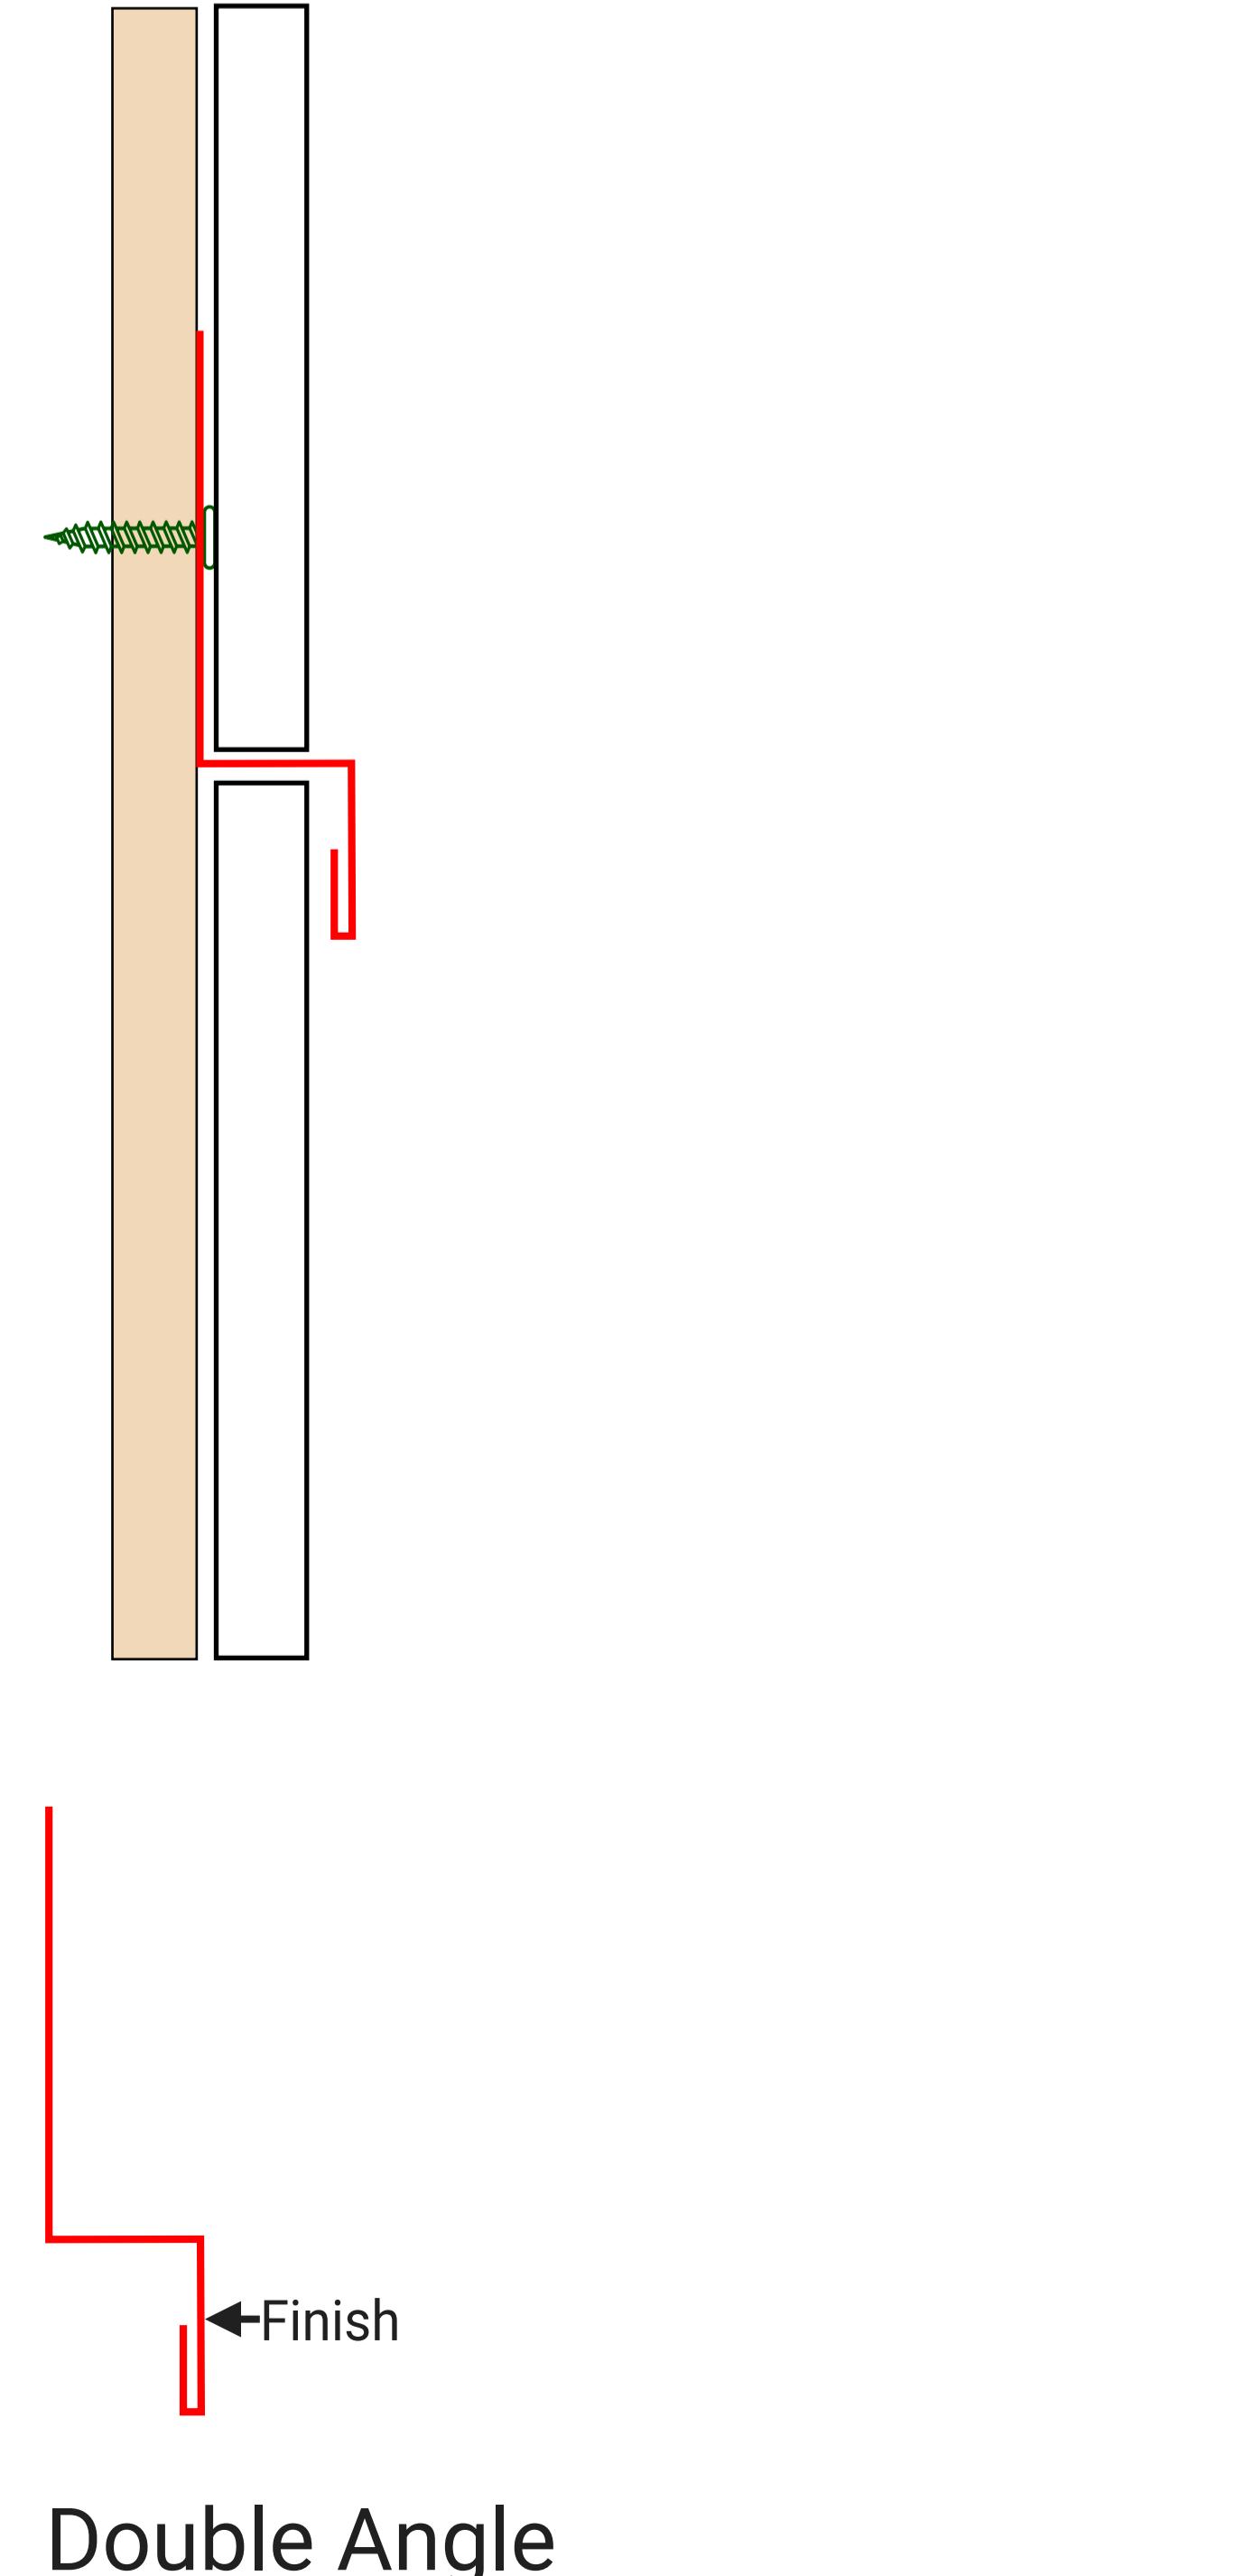


Double Angle

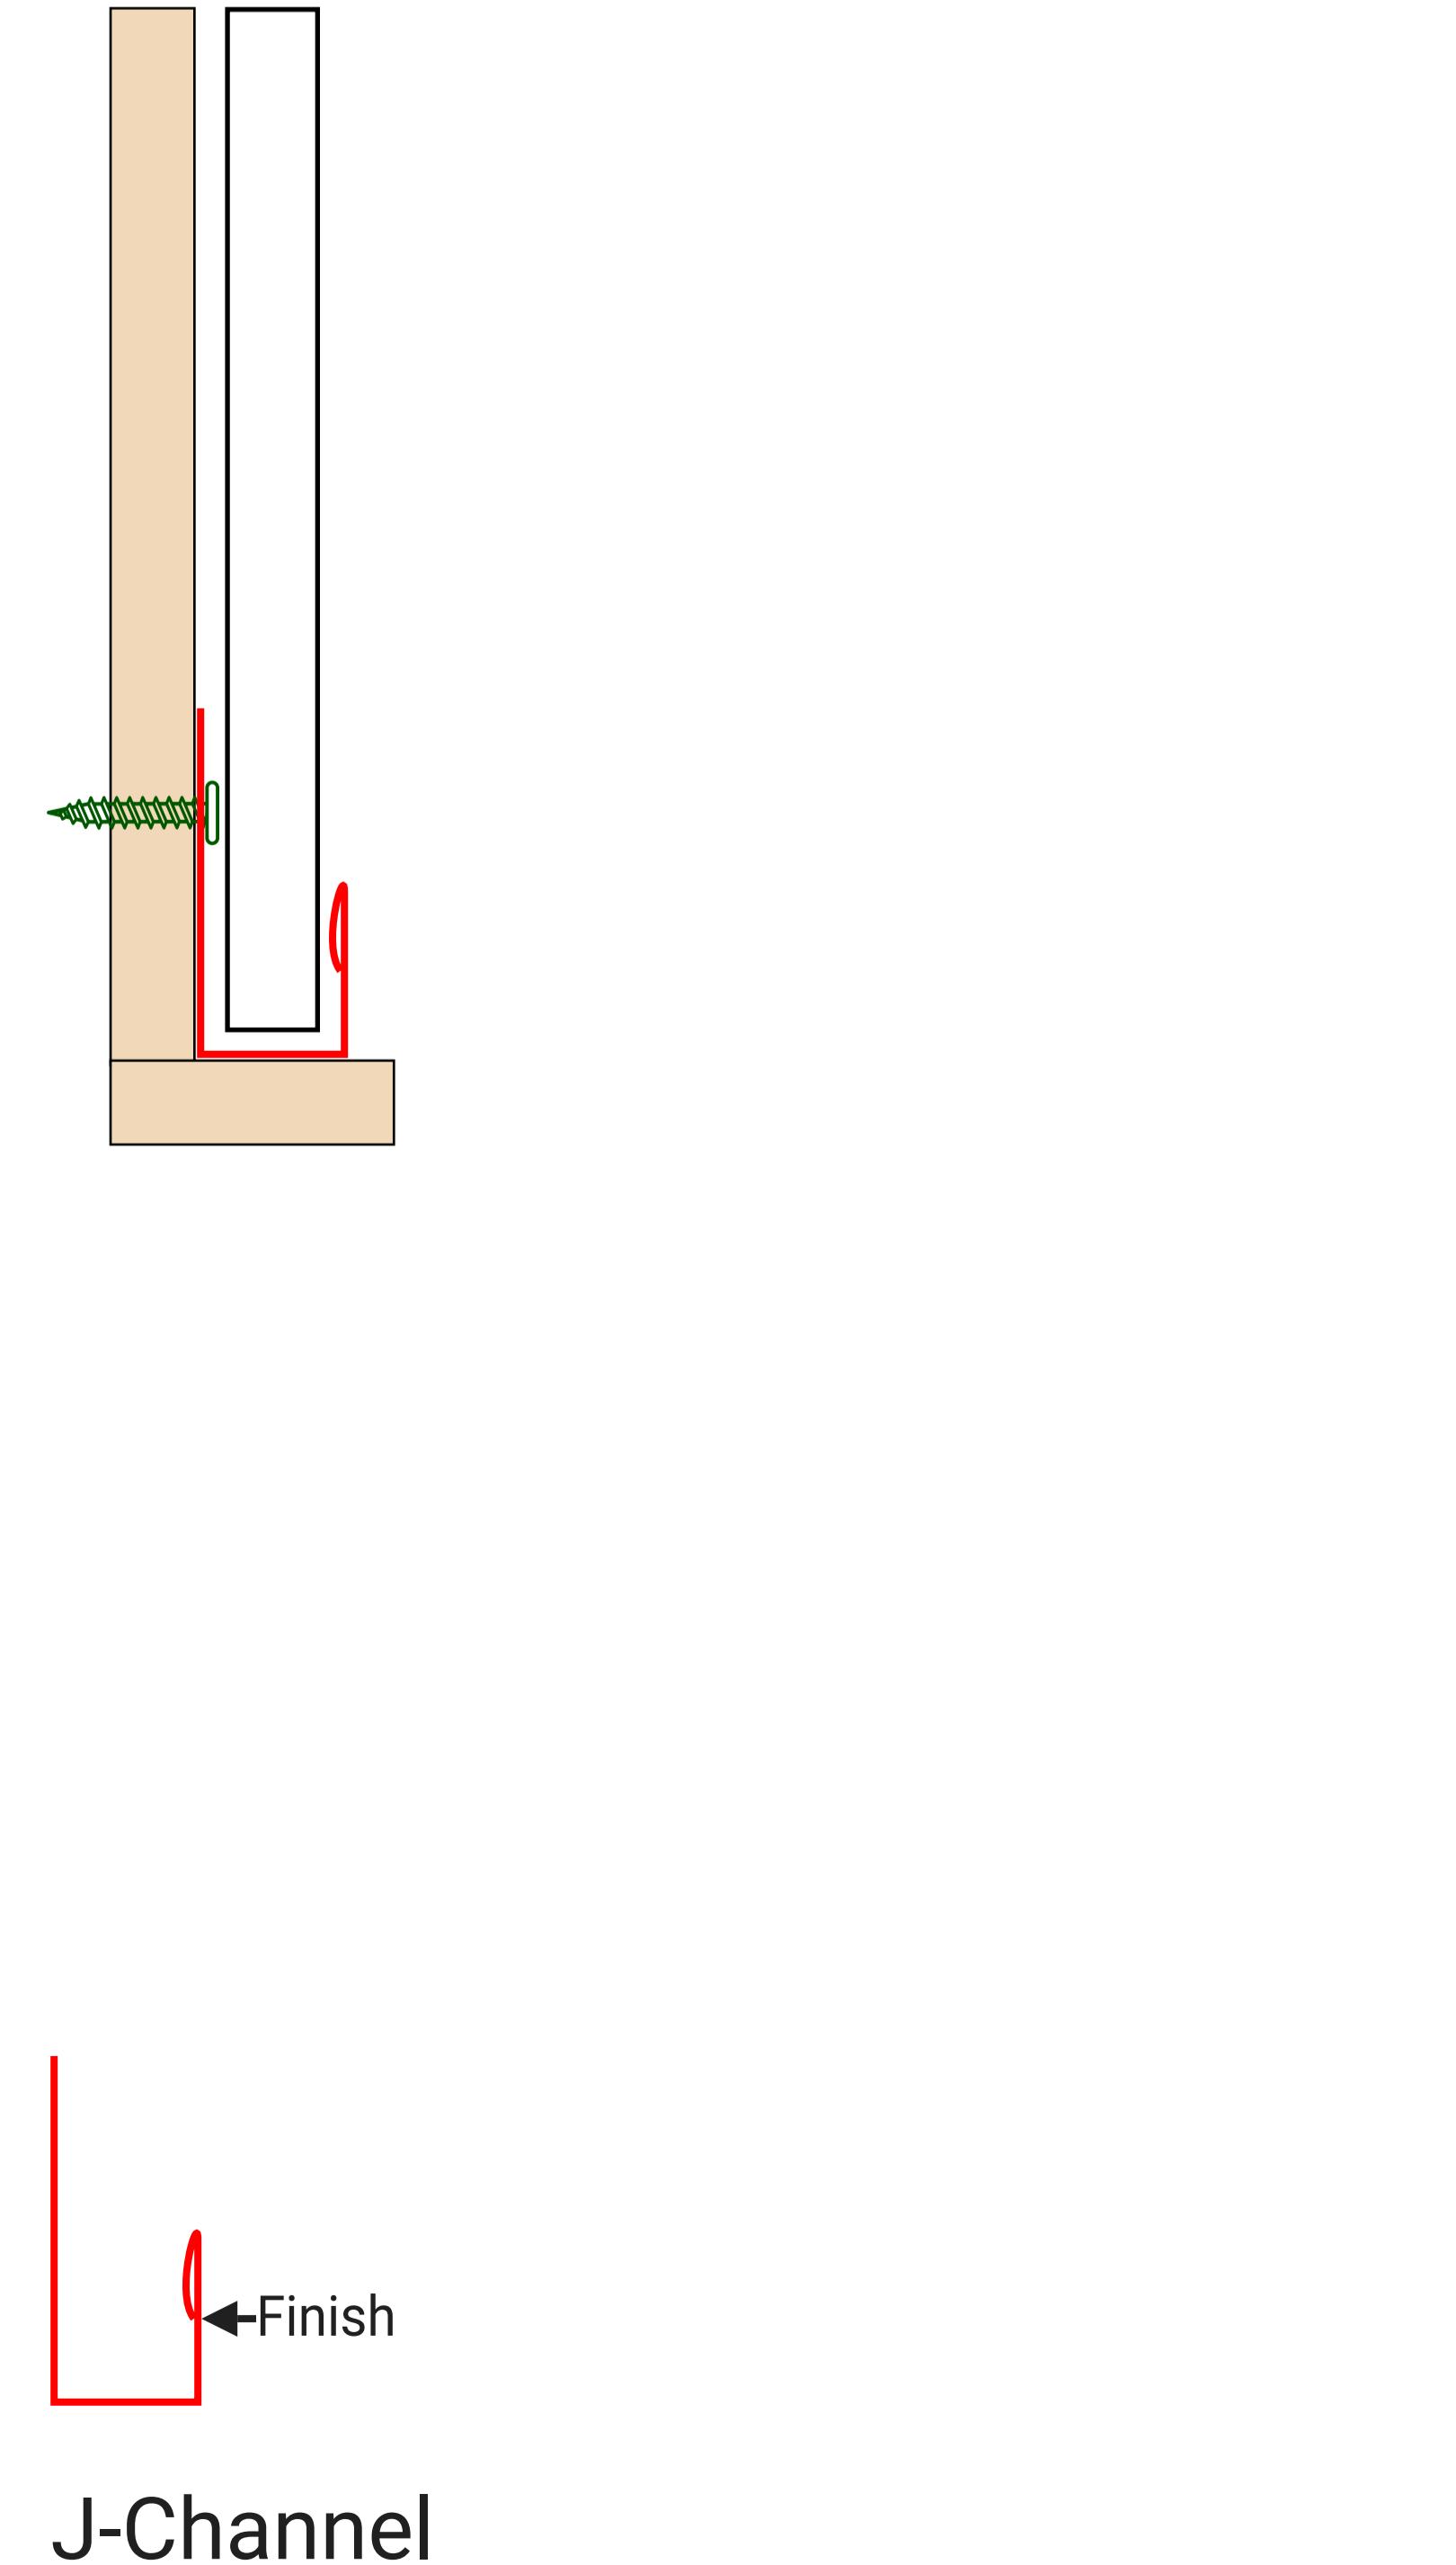TOP OF WINDOW OR DOOR
(Alternately use Drip Cap)

J-Channel

SIDE OF WINDOW OR DOOR

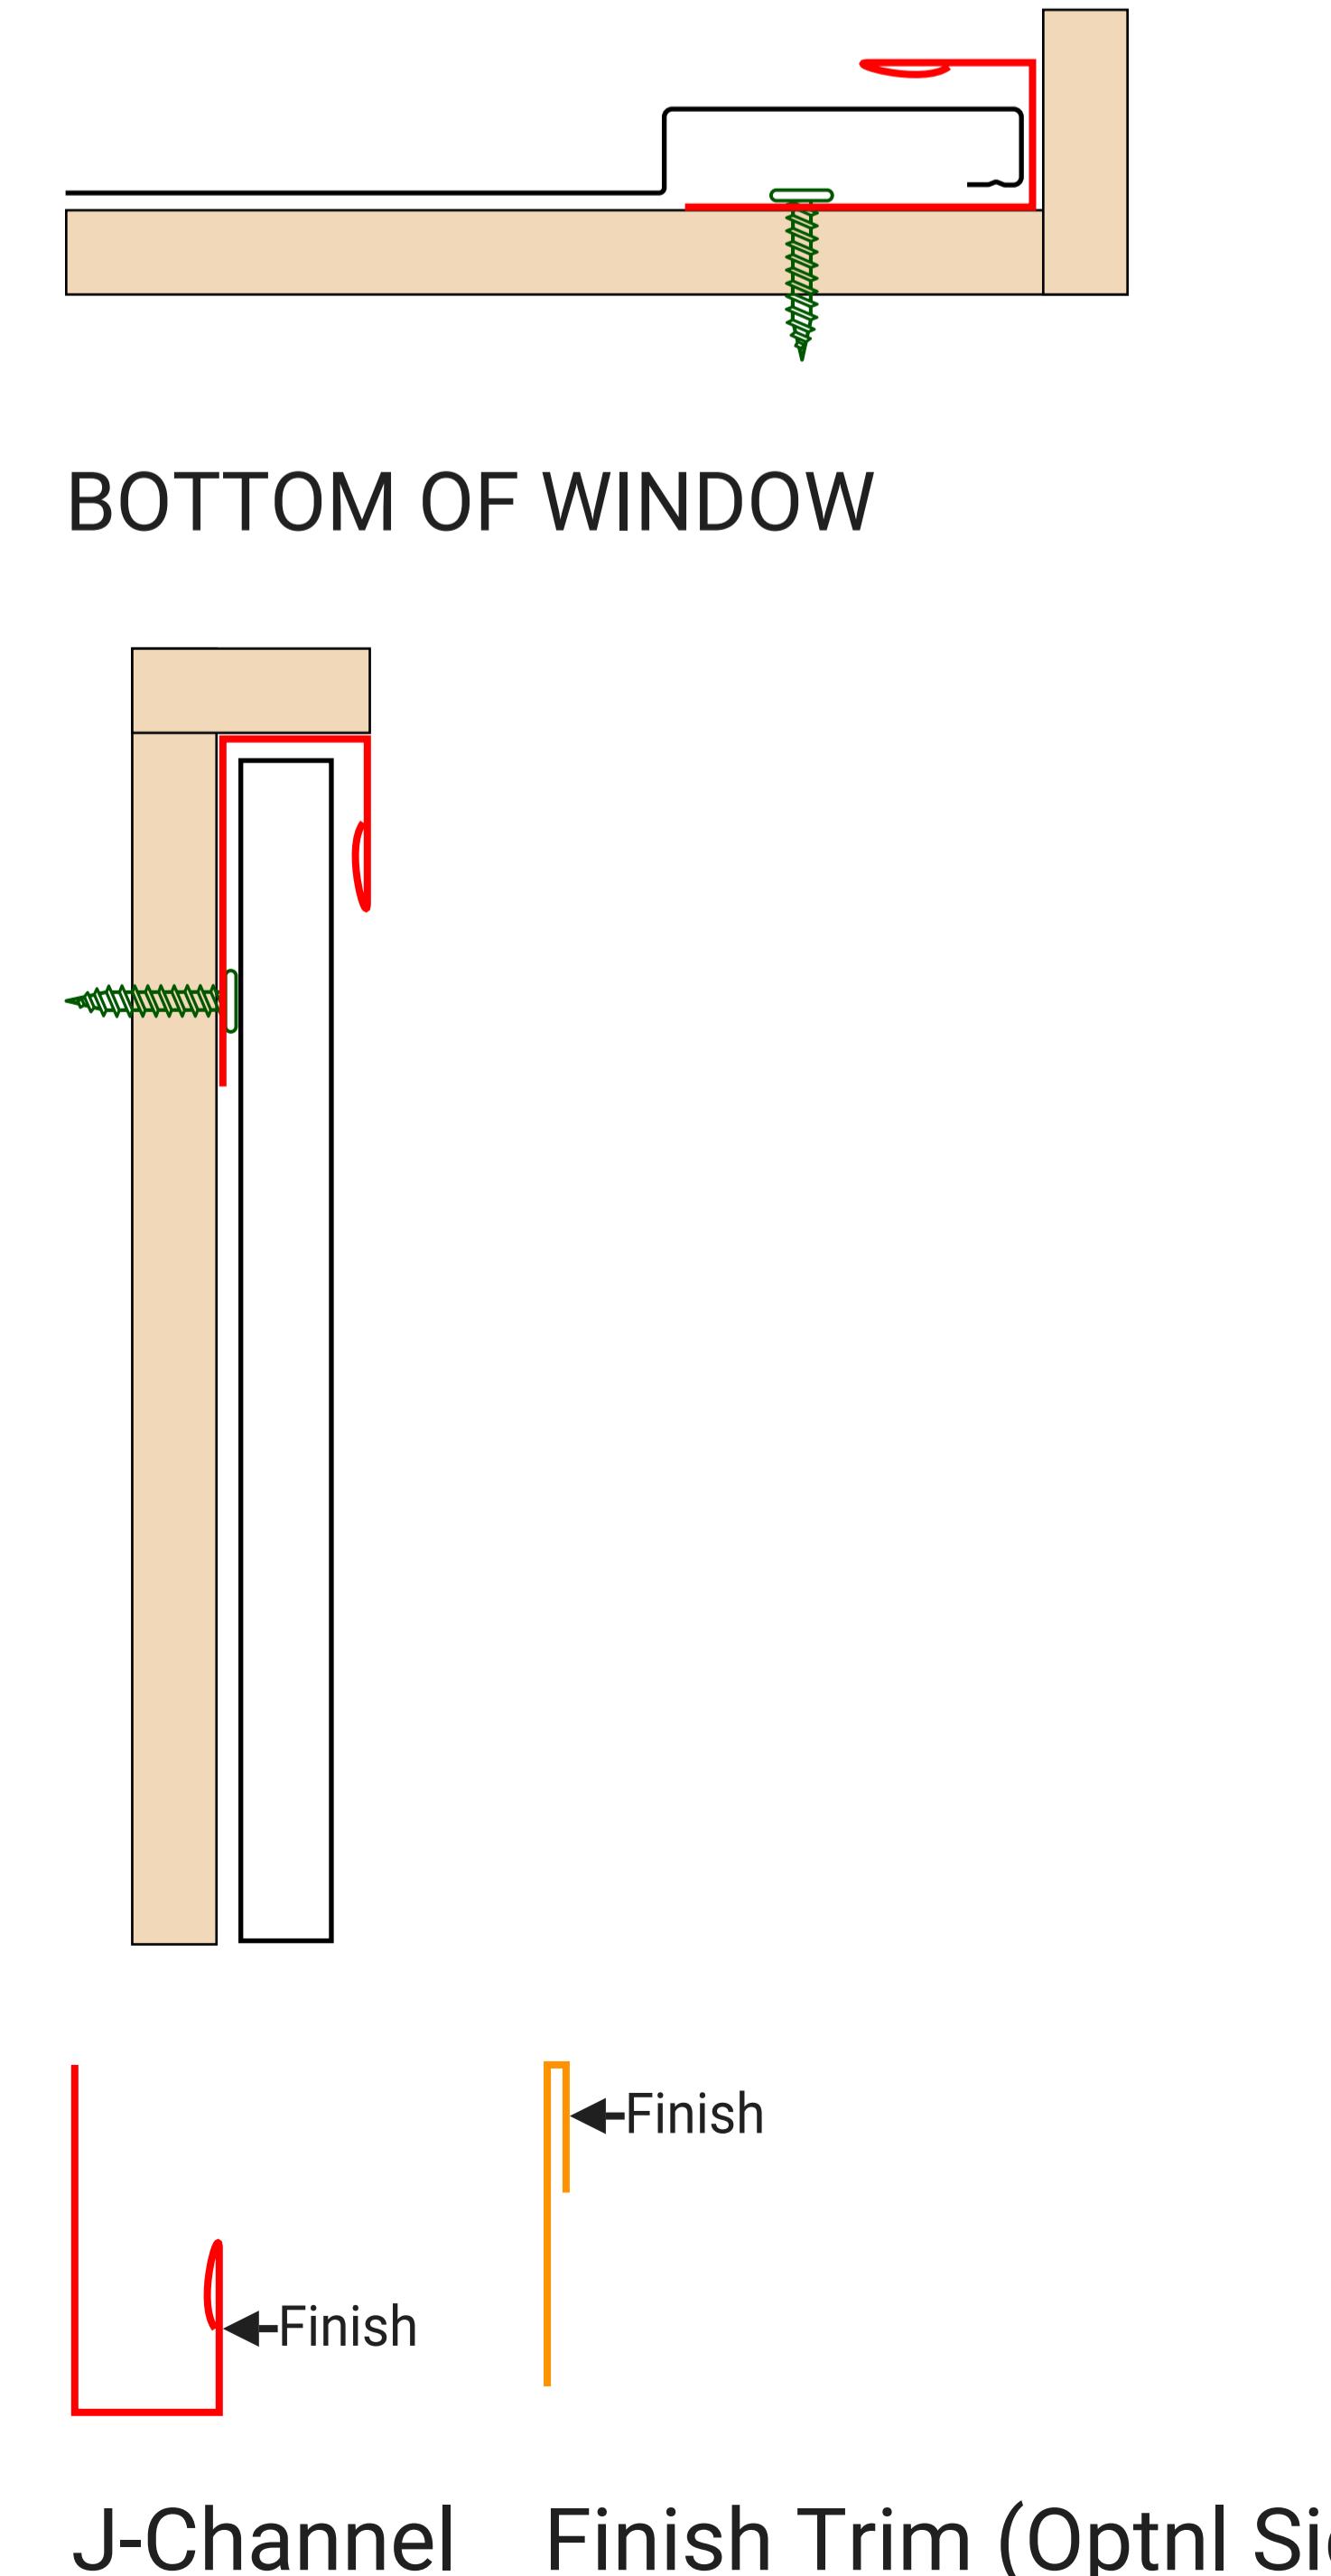

J-Channel

Finish Trim (Optnl Sides)